


20mm Pedal Spacer

Improve pedal alignment

For knees that track outside the pedal. 20mm Pedal Spacers add length to the pedal axle. Designed to move the foot out and away from the crank arm to provide more foot clearance. These add to stance width for cyclists needing help with knees-out, toes-in, extra wide feet, wide hips, or for those with discomfort on the outside of the knee. Sold as a pair.

Constructed of stainless steel and are a standard 9/16 threading into the crank arm. These are **not** intended for use with carbon fiber cranks, or with pedal systems that only use an allen wrench for installation. You have to be able to use a pedal wrench for pedal installation.

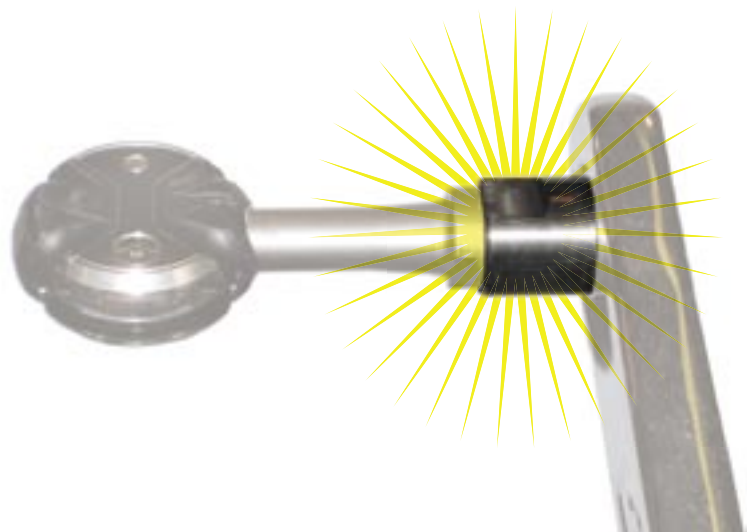

Bike Fitting Products

Part# 57020

MSRP \$34.95

These are an included component of the Bicycle Fitting System.



www.BikeFit.com

425-821-7237

P.O. Box 2156 • Woodinville, WA 98072-2156